

COMINOXREADER

data transfer on PC

The CominoxReader KIT INCLUDES:

- User license and installation instructions
- User manual
- Installation CD-ROM



CominoxWizard & CominoxReader

PC minimum requirements	M.U.	
Processor		Pentium 4
Processor speed	GHz	1
RAM	MB	512
Disk space available	MB	50
Operating system		Windows XP / 2000 / Vista / 7
Screen resolution	pixel	1024 x 768
SterilClave dedicated ports		1 serial and 1 USB or 2 USB
CominoxReader dedicated port		1 USB

COMINOXREADER is the software able to transfer the carried-out-sterilization-cycle information to the PC: it is the ideal system to keep the traceability under control. By COMINOXREADER, maintenance and carried-out cycles can be recorded, data can be filed, archived cycles can be displayed and every detail can be print in table or box format. It is the right tool to keep traceability under control.

COMINOXWIZARD

SterilClave-PC connection



SERIAL-ETHERNET MODULE

	M.U.	
Ethernet	Mbps	10/100
Interface		RS-232
Usage temperature	°C	tra 0 e 55
Relative humidity	%	tra 5 e 95
Dimensions	mm	75,2x80x43,3

Technical data are subject to change without notice

The CominoxWizard KIT INCLUDES:

- User license and installation instructions
- User manual
- Installation CD-ROM
- USB security key
- Serial cable
- Serial-USB adapter

ACCESSORIES: Serial-Ethernet Module

COMINOXWIZARD is the programme which allows to check sterilizer's functions in every moment. One PC can be connected simultaneously to many sterilizers and their status can be checked in real time, displaying all the details and the cycles graph. Sterilization and storage data can be filed and displayed at any time in table or graph form.